


Tap Shift Module Instructions

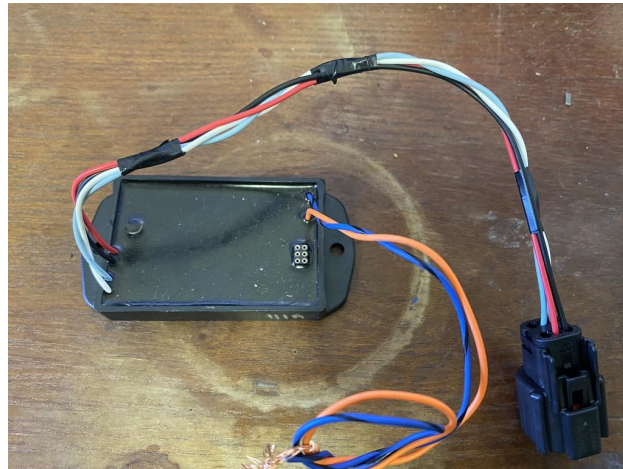

For tap shift to operate the transmission must be in manual mode not drive. Manual mode is 1 detent passed drive

Accessories Required:

(1) Tap Shift - SPDT Momentary Switch (On) - Off - (On)

Wiring Guide (Top to Bottom): Left Side:

Red- 12V Switched Power (+) Black- Chassis Ground


Blue- Can High

White Can Low

Right Side:

Blue w/ Stripe- Tap Up Input (0V to Tap Up) Orange- Tap Down Input

Orange- Tap Down Input (0V to Tap Down)

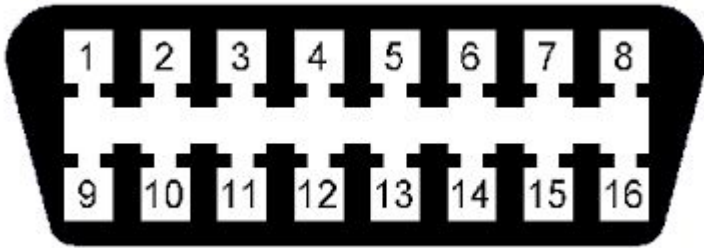

OBD II Port in your swap, Splice to the wires that go to the port. If using a swaptime engine harness there may be this connector already spliced in.

Pin 6 is can high. Splice can high (Blue) from tcase interior connector
Pin 14 is can low. Splice can low (White) from tcase interior connector
Hook black wire with eyelet to chassis ground.
Hook pin wire to ignition.

